

# Mini Messenger Phone Bag Project -Version 2 (solid)

by Yoan Zivkovic - Yoan Sewing Studio

[www.yoansewingstudio.com](http://www.yoansewingstudio.com)

[www.youtube.com/yoansewingstudio](http://www.youtube.com/yoansewingstudio)

©Copyright 2021 Yoan Sewing Studio



## Supplies

### Fabric Requirements

Fabric 1 : 1/4 yard of vinyl/ faux leather fabric

Fabric 2 : 1/3 yard of cotton quilting fabric

Fabric 3: 1/3 yard of cotton quilting fabric (or use 1x fat quarter)

Note : Yardage requirements are estimated, based on 44" wide fabric.

1/4 yard (20" wide) fusible woven interfacing - Pellon SF 101 <https://amzn.to/2N9E1td>

1 set of magnetic snap closure <https://amzn.to/3n2lEDm>

All purpose zipper 1" (2.5cm) wide, at least 6" long\* <https://amzn.to/3CaYxOb>

(2x) 1/2" (12mm) d-rings <https://amzn.to/3Gf640O>

1/2" (12mm) Adjustable Strap Adjuster <https://amzn.to/2XEFXnv>

(2x) 1/2" (12mm) swivel hooks <https://amzn.to/3juiy1l>

(2x) set of rivet ;i used medium 5/16" (8mm) size <https://amzn.to/3i2pGu6>

1/4" Basting Tape <https://amzn.to/3xKhpBH>



Fabric 1



Fabric 2



Fabric 3



FWI

Finished bag measurements :  
approx. 5 1/2" x 8 1/2" (14x21.5cm)

Abbreviation  
FWI : Fusible Woven Interfacing

watch the video tutorial  
<https://youtu.be/2H5Ww5k8E8I>

## Tools

Basic sewing notions

Walking foot

zipper foot

Polyester thread

Leather hole puncher tool

## Cutting

### Bag Exterior

Panel 1 (front & back exterior)

From fabric 1 cut (2x) 6 1/2" x 9" (16.5 x 23 cm) rectangles

Panel 2 (front exterior pocket)

From fabric 2 and FWI cut (1x each) 6 1/2" x 7 1/2" (16.5 x 19 cm) rectangle

Panel 3 (inner zipper pocket)

From fabric 3 cut 6 1/2" x 11" (16.5 x 28cm) rectangle

Panel 4 (pocket lining)

From fabric 2 cut 6 1/2" x 7 1/2" (16.5 x 19 cm) rectangle

Panel 5 (Flap external)


From Fabric 1 cut 5 1/2" x 6 1/2" (14 x 16.5 cm) rectangle

Panel 6 (Flap Lining)

From Fabric 2 cut 5 1/2" x 6 1/2" (14 x 16.5 cm) rectangle



Panel 1



Panel 2



Panel 3



Panel 4



Panel 5




Panel 6

## Bag Interior

Panel 7 (upper interior)


From fabric 2 & FWI cut (2x each) 6 1/2" x 1 1/2" (16.5 x 3.8 cm) strips



Panel 8 (card pocket)

From Fabric 3 cut 18" x 3" (46 x 7.6cm) rectangle

From FWI cut 18" x 2 1/2" (46 x 6.5 cm) rectangle




Panel 9 (sides, back)

From fabric 3 cut (2x) 2 1/4" x 5 1/2" (5.7 x 14 cm) rectangles




Panel 10 (bottom, back)

From fabric 3 cut 6 1/2" x 3" (16.5 x 7.6 cm) rectangle




Panel 11 (lower front)

From fabric 3 cut 6 1/2" x 8" (16.5 x 20.5 cm) rectangle



Panel 12 (slip pocket)



From fabric 2 & 3cut (1x each) 6 1/2" x 6 1/2" (16.5 x 16.5cm) square



## Strap/d-ring tabs

d-ring tabs : cut (2x) 2" x 2" (5 x 5cm) squares

adjustable strap : 50" x 2" (127 x 5 cm)



## Preparation


Apply FWI (according to the manufacturer's instructions) on the wrong side of the following : Panel 2, 7, 8

## Directions

(Below are brief instructions please refer to the video tutorial for more detailed demonstration)

Seam allowances may vary between 1/8", 1/4", 3/8"; please pay close attention to the instructions given in the video.

1. Sew and install the front exterior zipper.
2. Install the female magnetic snap on the right side of panel 2.
3. With panel 2 & 4 right sides together sew the top edges with 1/4" (6mm) of seam allowance, press, then topstitch.
4. Install the front pocket panel on the right side of the front exterior panel (panel 1).
5. Install the male magnetic snap closure on the right side of the flap lining (panel 6)
6. Sew and install the flap, **use 1/8" (3mm) of seam allowance**).
7. Assemble the bag exterior, use 3/8" (1cm) of seam allowance).
8. Following the below diagram, draw the folding lines on the wrong side of panel 8 (card pocket panel).

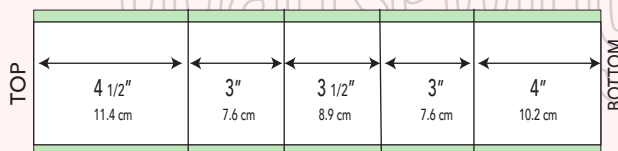

watch the video tutorial  
<https://youtu.be/2H5Ww5k8E8I>

9. Fold and press panel 8 to create 2x card slots, trim the top edge to measure 5 1/2" (14 cm).
10. Finish the back interior panel by sewing panel 9, 7, and 10.
11. Make the front interior panel by sewing panel 7 and 11 together.
12. Sew and install the slip pocket.
13. Assemble the bag interior (remember to leave an opening at the bottom).
14. Sew the adjustable strap then install the hardware.
15. Assemble the bag. Finish with topstitching.
16. Sew and install the d-ring tabs, then attach the strap.

Note :You may sell the bag that you make from this pattern given that it's a home based business.